Quick Quide of Linux MPEG4 Embedded DVR

Model Number:

M4-401MB

M4-401D1/ M4-401RW

M4-404RW/ M4-804RW

Mobile DVR

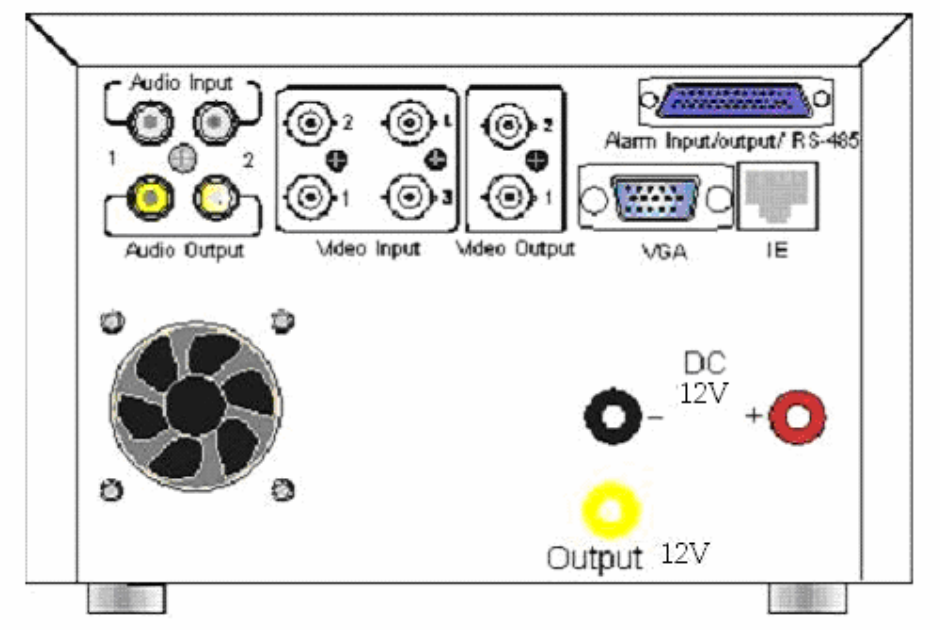

DC12V power in

Standard DVR

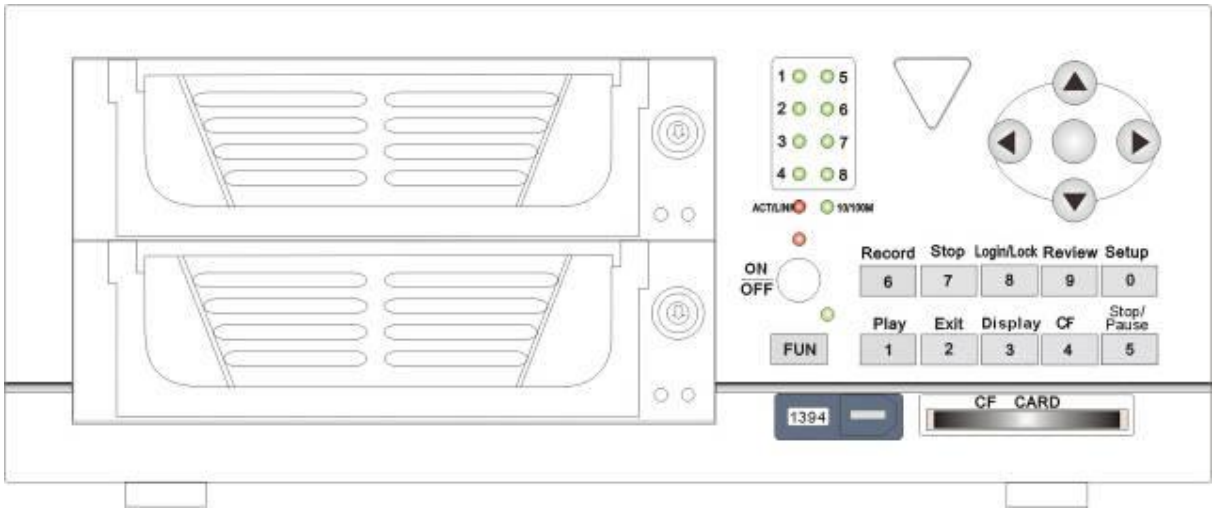

<u>For all models of Linux DVR:</u> Very important, please read

1. **Put HDD inside DVR before power on.**
2. **Plug on power.**
3. **ON/OFF led on : DVR is in standby status.**
4. **Press ON/OFF button to enable DVR.**
5. **Led on panel will keep flashing for a few sec , video on screen (if video does not come out on screen , press [F4] to switch video between BNC out and VGA monitor).**
6. **Buzzer start to beep if video loss or other error detected , press LOGIN to enter with administrator pass:88888888 to stop buzzer beeping , otherwise buzzer will keep beep for 30 min.**
7. **Use administrator pass:88888888 to login , press Setup to setup video system (PAL or NTSC)**

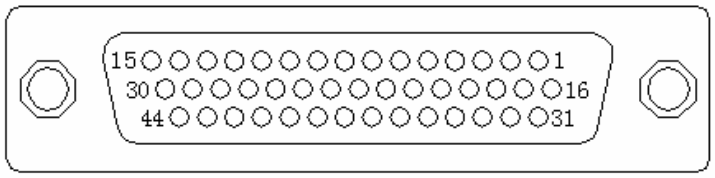

8. **Select Protocal and baud rate well, set PTZ ID : 001 (if only one PTZ connected)**

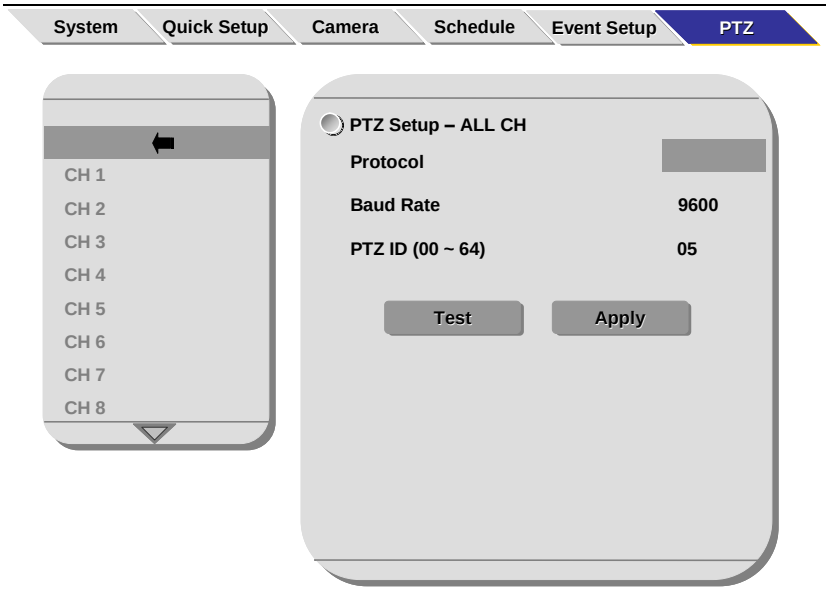

9. **Select channel PTZ connected , press [F2] to enter PTZ control mode.**
10. **Use administrator pass:88888888 to login , Press "Record" to enable manual record. Led of camera number will be on.**
11. **Use administrator pass:88888888 to login, Press "Check" on remote controller or "Preview" on panel to enter playback mode.**
12. **For operation on front panel , please press FUN first and Login with administrator pass, then you will be able to operate.**